

• 450 G-2

600°C to 1800°C

Features

- Two Wire Designed IR Pyrometer with fibre Optics
- Temperature measurement from 600°C...1800°C
- Spectral range 1.0 μm
- Analog Output 4-20mA
- USB 2.0 Digital output
- Highly accurate 0.3% of measured value
- Fast response time of 250 msec
- Fibre optic withstand ambient temperature upto 250°C
- Very good stability
- User friendly PC software

Standard Scope of Supply

- Two Wire Pyrometer with 6mtr Long heavy duty Fibre optic cable in SS conduit
- Optical head
- Analog Output 4...20mA
- USB 2.0 digital output
- 1.5 mtr. long connection cable with connector
- Calibration Certificate, PC software and operation manual

Optional

- Extra cable lengths
- Mechanical and Electrical Accessories
- USB cable

Applications

- Furnace Crown
- Fore hearth
- Working end
- Furnace sidewall
- Feeder

• 450 G-2

Highly Accurate On line Infrared Non-contact Pyrometer With fibre optic cable for Glass Industry




450 G-2 is specially designed highly accurate digital IR Fibre Optic pyrometer which provides high performance and low maintenance of non contact temperature measurement of molten glass in Glass industries for melting tank, Fore hearth, Feeder and Working end. The rugged fiber optic cable is designed to withstand high ambient temperature in glass industry without water cooling. Emissivity, Subrange, Response time can be preset ex-works or adjusted through software. This enables the instruments to be adapted to various measuring tasks. 450-G2 IR Pyrometer has solid stainless steel housing which provides high operational safety in rough industrial environments. The particular IR Pyrometer model has small optical head which makes it easier to reach harshest of locations

Software “Infrasoft”

Tempsens “MT500” software is under standard scope of supply. It offers possibilities of connecting two pyrometers simultaneously for parameter setting, Communication between the pyrometer and the software is implemented via a cable connected between the pyrometer and the PC serial port. It comes with record feature and parameter settings features. Some of the parameters adjustable via software are


- Emissivity
- Response Time
- Analog Sub Range
- Unit Of Temperature(°C/°F)

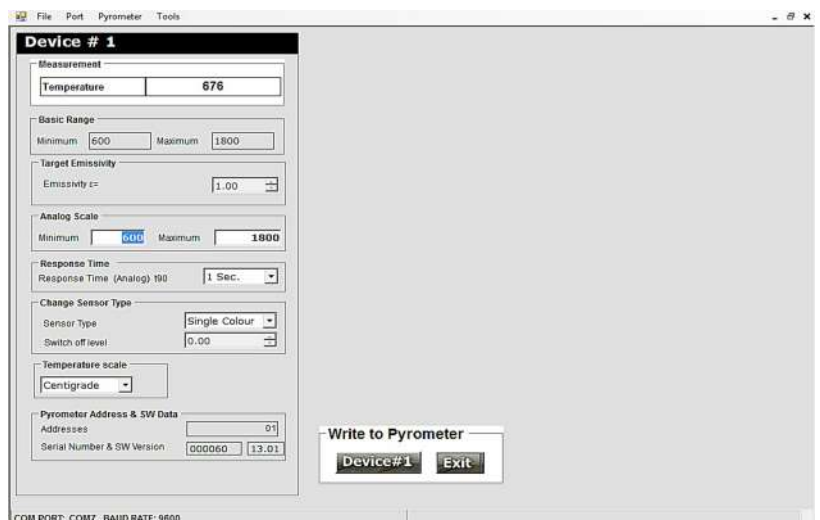

Technical Specifications


Model	450 G-2
Temperature Range (Analog sub-range adjustable)	600°C to 1800°C
Spectral Range	1 µm
Photodetector Type	Si
Distance to Spot Size Ratio	100:1 (Min Spot Size 11mm)
Emissivity (ε)	0.05.....1.0 adjustable via DIP switch
Response Time	250 msec adjustable upto 10 sec
Accuracy	± 0.3% of measured value or ± 3°C whichever is greater
Repeatability	± 0.2% of reading in °C + 1°C
Analog Output	4 - 20mA (Two Wire)
Digital Output	USB 2.0
Operating Temp. Range	Pyrometer 0°C....70°C(Electronics) Optical head and Fibre Optic max 250°C
Storage Temp. Range	-20°C...70°C
Adjustable Parameters and Features via Software	Response Time, Analog Scale (Sub Range), Unit Of Temperature (°C/°F) etc
Power Supply	24 V DC (Looped)
Power Consumption	Max 0.5 watt
Protection Class	IP65
Housing	Optical head-Stainless Steel; Electronic Box: Aluminium
Operating Humidity	10-95%, non condensing conditions
Weight & Dimensions	0.500 Kg 112.5mmx82.5mmx33mm(L x W x H)

Spot Sizes

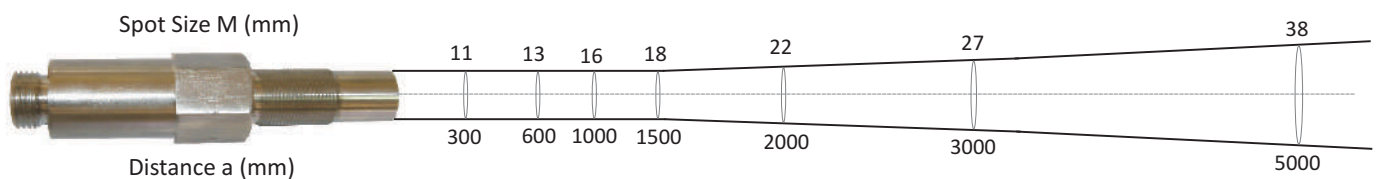

Pyrometer Drawing

Optical Head

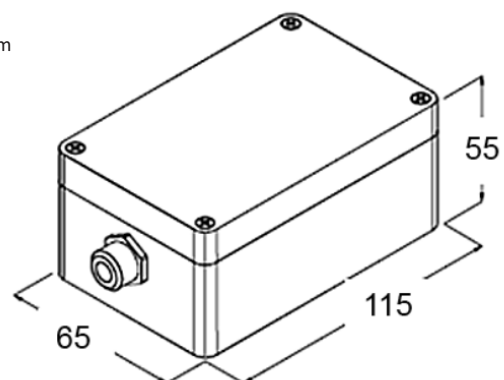

Electronic box

All Dimensions in mm

Accessories

Air purge unit with sighting tube

Reference No. 8100 - 01



Air purge unit with Ceramic tube

Reference No. 8100 - 02



Air purge with Mounting flange

Reference No. 8100 - 03



Fiber Optic Cable

Reference No. 6000 - 01 (6 Mtr)
Reference No. 6000 - 02 (10 Mtr)



Power supply Input 110/230V AC

Reference No. 9000 - 02
Output 24 V DC, 0.7Amp.




Temperature Indicator


Reference no: 9000-01




Dimensions

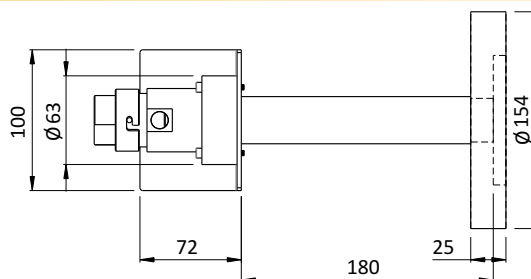

Air purge with Mounting flange
Reference No. 8100 - 03

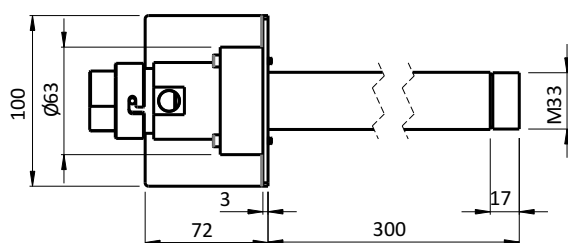

Air Purge Unit with Sighting Tool
(Reference No. 8100-01)

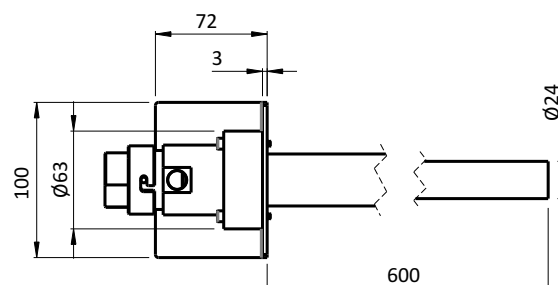

Air Purge Unit with Ceramic Tube
(Reference No. 8100-02)

Tempsens Instruments (India) Limited

B-188, B-189, B-169 (Part), B-188A & F-188(E), Road No 5, Mewar Industrial Area, Madri, Udaipur, Rajasthan, India, PIN - 313003

Ph.:+91-9116554600

Email: info@tempsens.com

