


GLASS LEVEL PROBES FOR LEVEL CONTROL



Glass level probe for glass level control is made with Pt alloy probe. Inside and outside protection is with recrystallised alumina tubes, with this customer can replace old fashioned water cooled level probes. These probes are available in different type of hangers as per customer requirement. Service life is very good. All lengths & dia are available as per site needs.

Type	TI/GL/03
Measuring Range	Glass Contact.
Sensor Type	Pt. or Pt.Rh alloy Electrode.
Protection Sheathing	Recrystallised Alumina KER-710 (C-799) Tube with hole at one end. With PT Alloy Tip for Glass Level Sensing.
Application	Fore Hearth & Distributor.

S.No.	Description
1.	SS/Aluminium Connection Head IP-67.
2.	SS Chain.
3.	½" NPT(M) Cable Gland.
4.	Holding Tube : (Inconel - 600 / SS310).
5.	Recry. Alumina Outer Tube hole at Close End :- OD X ID to be specified.
6.	Inner Tube suitable to Outer Tube.
7.	Pt. Alloy Electrode.

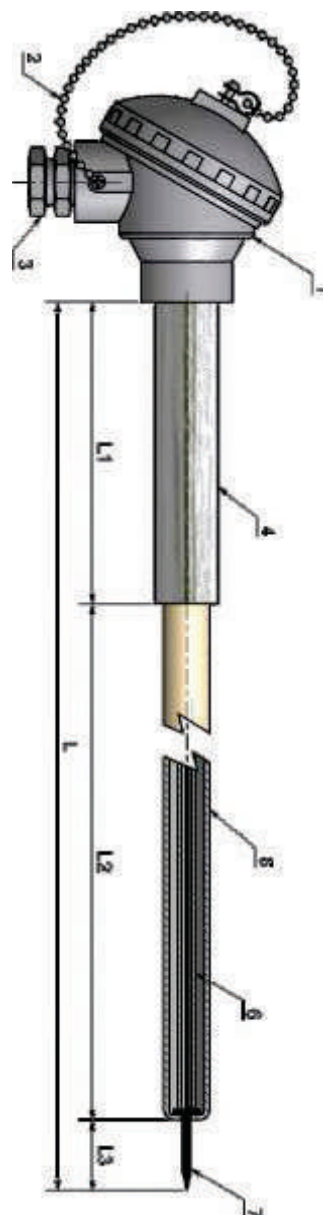

TI / GL / 03